

PARTS & SERVICE: 020 8988 7400
E-mail: Parts@clarkeinternational.com or Service@clarkeinternational.com

SALES: UK 01992 565333 or Export 00 44 (0)1992 565335

CIAPE INTERNATIONAL Hemnall Street, Epping, Essex CM16 4LG www.clarkeinternational.com

# CECTE PONER



# **1KW INVERTER GENERATOR**

MODEL NO: IG1000

PART NO: 8877050

OPERATION & MAINTENANCE INSTRUCTIONS



LS0614

## INTRODUCTION

Thank you for purchasing this CLARKE 1kw Inverter Generator

Before attempting to use this product, please read this manual thoroughly and follow the instructions carefully. In doing so you will ensure the safety of yourself and that of others around you, and you can look forward to your purchase giving you long and satisfactory service.

### GUARANTEE

This product is guaranteed against faulty manufacture for a period of 12 months from the date of purchase. Please keep your receipt which will be required as proof of purchase.

This guarantee is invalid if the product is found to have been abused or tampered with in any way, or not used for the purpose for which it was intended.

Faulty goods should be returned to their place of purchase, no product can be returned to us without prior permission.

This guarantee does not effect your statutory rights.

### **ENVIRONMENTAL RECYCLING POLICY**



Through purchase of this product, the customer is taking on the obligation to deal with the WEEE in accordance with the WEEE regulations in relation to the treatment, recycling & recovery and environmentally sound disposal of the WEEE.

In effect, this means that this product must not be disposed of with general household waste. It must be disposed of according to the laws governing Waste Electrical and Electronic Equipment (WEEE) at a recognised disposal facility.

# TABLE OF CONTENTS

INTRODUCTION	_
GUARANTEE	
ENVIRONMENTAL RECYCLING POLICY	2
TABLE OF CONTENTS	3
Work area Positioning the generator Fire prevention Prevention of electric shock Additional safety rules for generators	4 4 5
SAFETY SYMBOLS	6
GENERATOR OVERVIEW	7
UNPACKING AND ASSEMBLY	8
BEFORE USING THE GENERATOR  Earth point	8 9 10
USING YOUR GENERATOR  Starting the engine  Connecting electrical devices  Economy switch  Indicator lights  Shutting down the generator	12 14 16 16
MAINTENANCE  The engine oil (every 20 hours of use) The air filter (every 50 hours of use) The spark plugs (every 50 hours of use) Fuel tank filter	19
PARTS AND SERVICING	2
TROUBLESHOOTING	. 22
PARTS AND SERVICING	. 2:
SPECIFICATIONS	. 2
EXPLODED DIAGRAM & PARTS LIST	. 2
DECLARATION OF CONFORMITY	. 2
DECLARATION OF CONFORMITY	. 2

